

Note: Not all android Devices are created Equal, Please try your device before purchasing

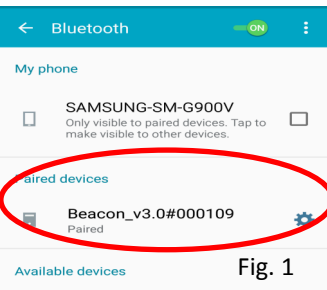


Fig. 1



Version: 2017.02.17

Fig. 2

Step 1: Pair the Beacon with android device. (fig. 1)

Step 2: Download DigiFarm app, Open it and select the gear in the top right corner (fig. 2)

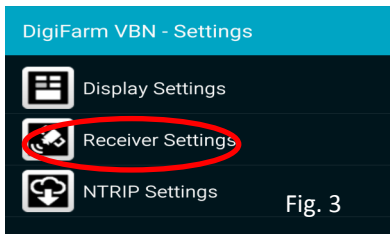


Fig. 3

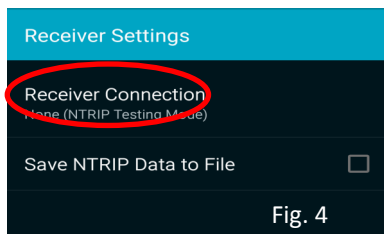


Fig. 4

Step 3: Select receiver settings (fig. 3) then Receiver connection (fig. 4), External via Bluetooth (fig. 5), then choose Bluetooth device (fig. 6), check auto-enable Bluetooth box (fig. 7)

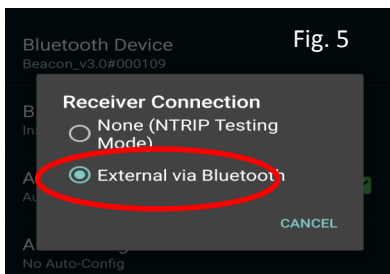


Fig. 5

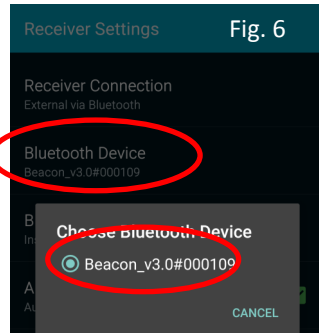


Fig. 6

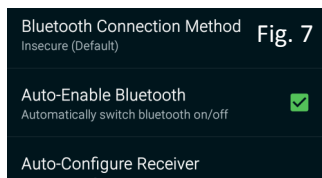


Fig. 7

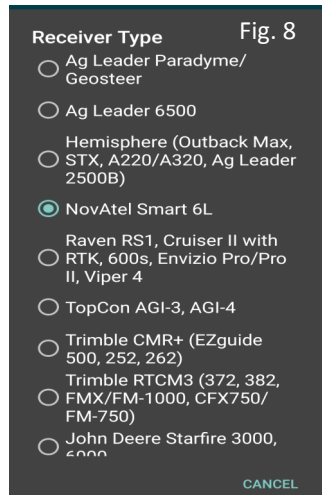


Fig. 8

Step 4: select the back arrow back and select NTRIP Settings (Fig. 8), Network protocol NTRIP v1.0, Receiver Type (fig. 8), your username and password from DigiFarm , and get from external receiver (if the receiver is capable) (fig. 9).

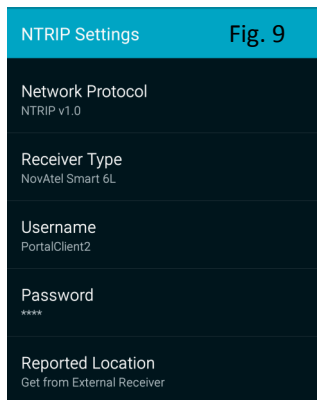


Fig. 9

Step 5: return to the home screen of the app and push Connect.

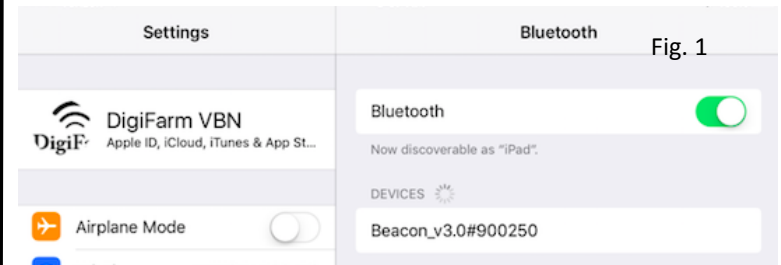


Fig. 1

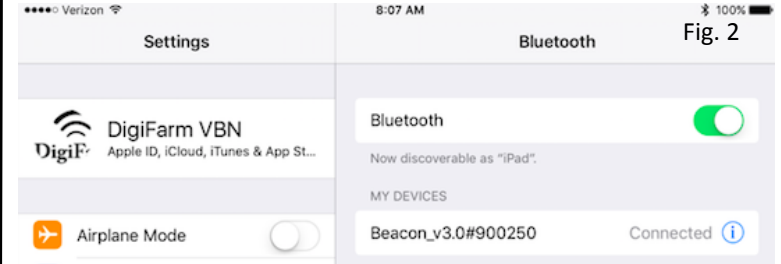


Fig. 2

Step 1: Pair the Beacon with the iOS device via the settings app. (Fig. 1 & 2)

Step 2: Download the DigiFarm app and allow notifications. (Fig. 3)

Step 3: Confirm Beacon connection within the app(Fig. 4), Select your receiver type(Fig. 4), and enter your username and password. (Fig. 5)

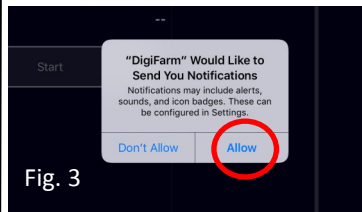


Fig. 3

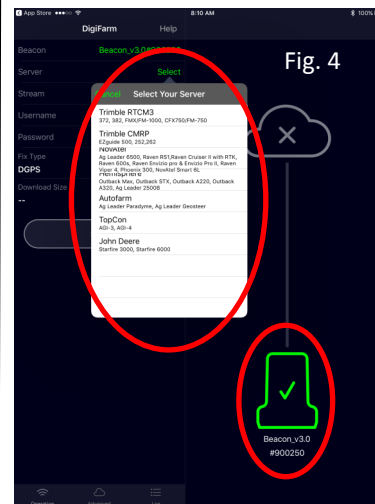


Fig. 4

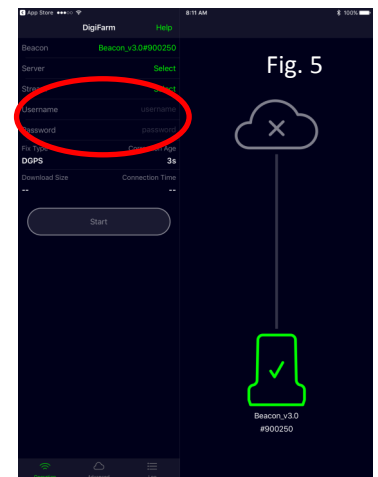


Fig. 5

Step 4: Press the green Start button, you will be prompted to allow location access. Allow this (Fig. 6) and you will start streaming RTK data. (Fig. 7)


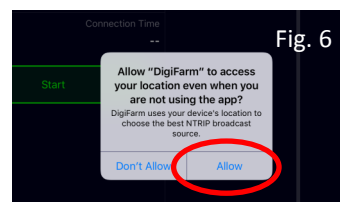


Fig. 6

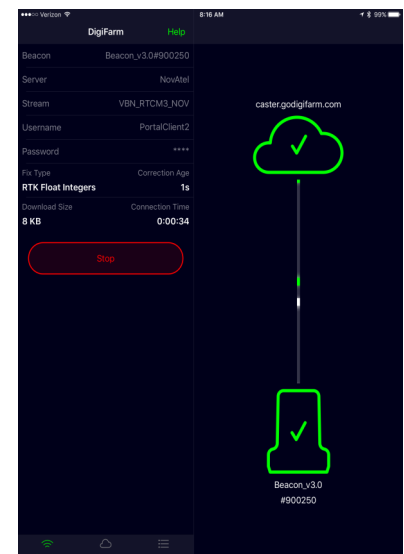

DigiFarm Technical support  
(319)531-7574  
support@godigifarm.com