

Begin by connecting the Beacon to the the AGI 4 Via the adapter cable and black connector on the back of the receiver.

Next, navigate to the Wrench -> System -> GPS -> Correction. Configure the GPS correction source page to match the screenshot below.



Return to the Run screen to confirm RTK fix. Below are Run screens that show where to look.

