



# DigiFarm

## Quick Reference Card


### John Deere SF3000/SF6000


### Smart Cable

John Deere SF3000/SF6000 smart cable install & setup

Begin by connecting the Beacon and adapter to the Port A connection on the ParaDyme or GeoSteer cabling.



Next Connect the Power Tee to the Steer Command main power connection on the Display cable.

Tap the Setup wrench icon, then the  icon.

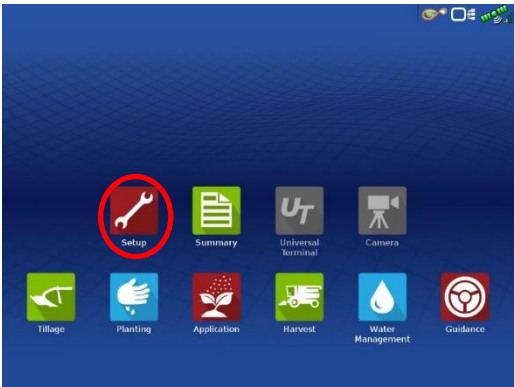

From the GPS/Guidance setup screen, select the wrench next to ParaDyme/GeoSteer.

Next select the GPS tab, then the RTK icon

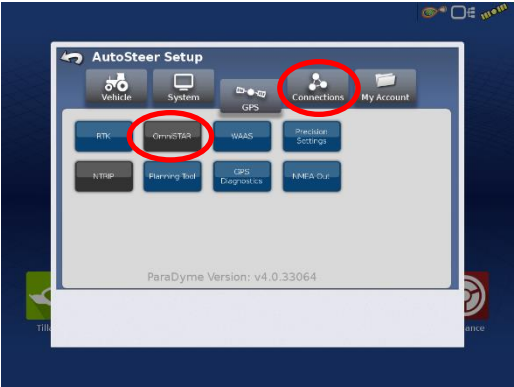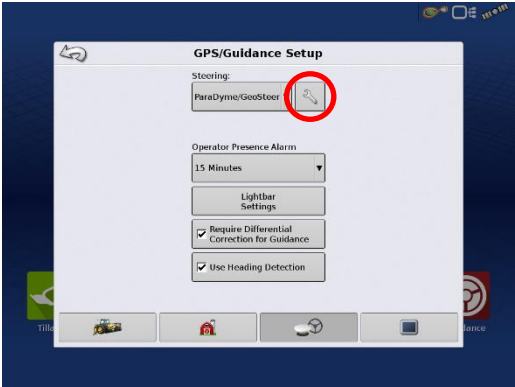


Select the Connection type on the right and ensure its set to external.

Next, select GloNass


Initialization on the right and enable it.

Make sure the Base Station Type is set to Trimble.

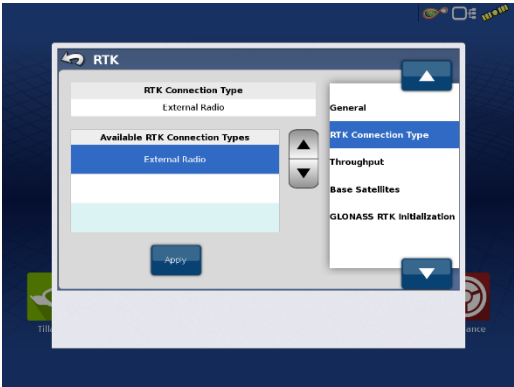

Back out of this screen and select the NMEA Out icon.

- Port A messages should match the screenshot below.

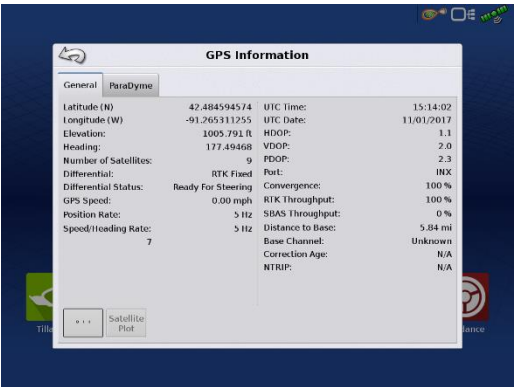

- Baud Rate should be set at 38400.

Return to the run screen and confirm you have throughput and RTK fix.



# DigiFarm

## Quick Reference Card

John Deere SF3000/SF6000

Smart Cable

DigiFarm Technical Support

319.531.7574

[support@godigifarm.com](mailto:support@godigifarm.com)