

AGCO NT01 Display Setup

For:

- 2018 CH MT600E wheeled tractor
- 2018 CH MT700
- 2017 FT 500/700/800/900/1000
- 2017 RoGator C series*

2017 Gleaner S9*
2018 TerraGator C series*

**Note: Pins 4 & 5 need to be interchanged on BN2027 for RoGator, TerraGator & Gleaner*

¹ Install the Beacon & AGCO adapter. Use port X5130 behind the radio knockout on RoGator, TerraGator, & Gleaner.




² On the Fendt & Challenger series, it is located on the VD03 to receiver cabling above the drop-down roof panel.




³ On-screen configuration:

Select Auto-Guide > Auto-Guide (again) > System > Signal




⁴ Select:
RTK network as signal type >
External Modem as Modem type >
Choose the correct Baud rate for your corresponding external modem >
Data parity None >
Signal Format RTCM3.1.

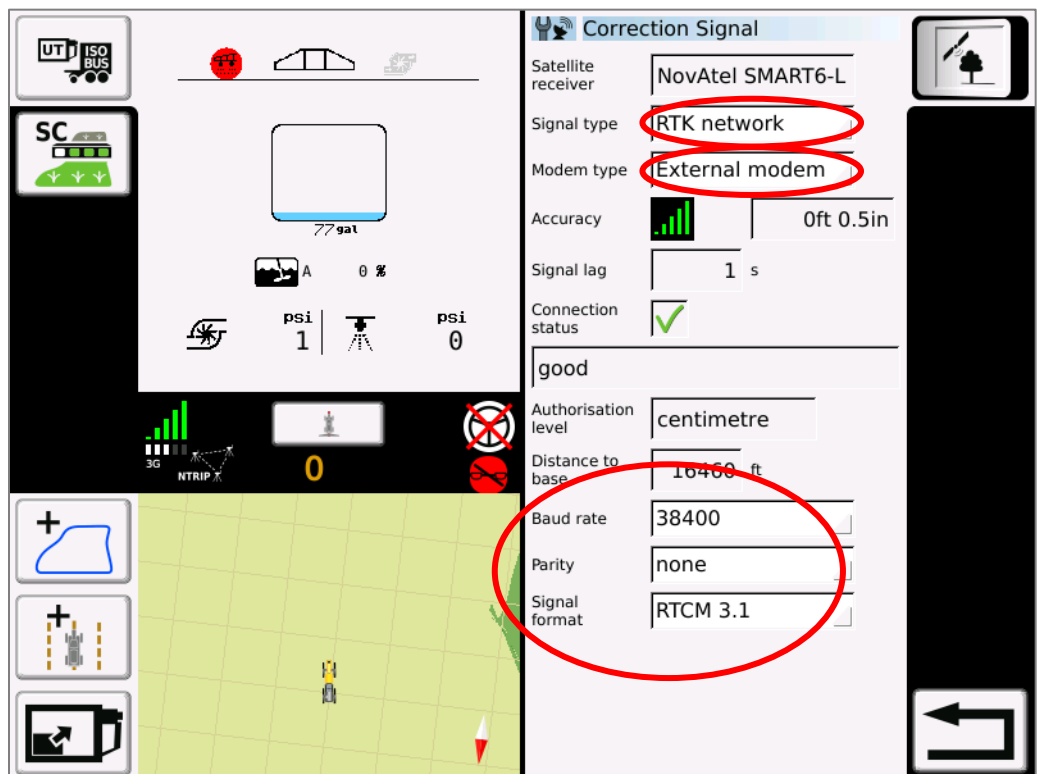


Android Quick Reference Card

Note: Not all android devices function the same; please try your device before purchasing.


1 Pair the Beacon with android device

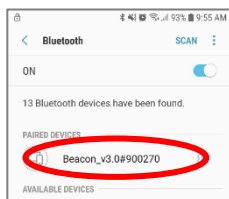


2 Download the **DigiFarm NTRIP Client** app, open it, and select the gear in the top right corner

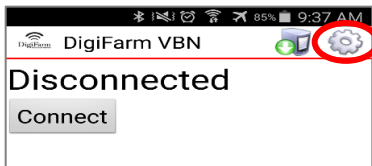


3 Select receiver settings, then receiver connection

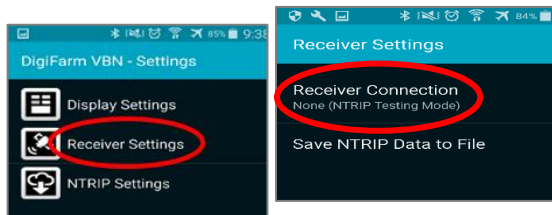


4 Select external via Bluetooth, then choose Bluetooth device

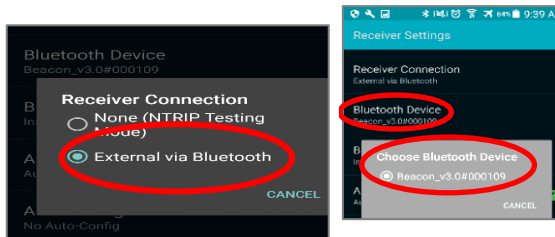

5 Check auto-enable Bluetooth box, then go back & select NTRIP Settings

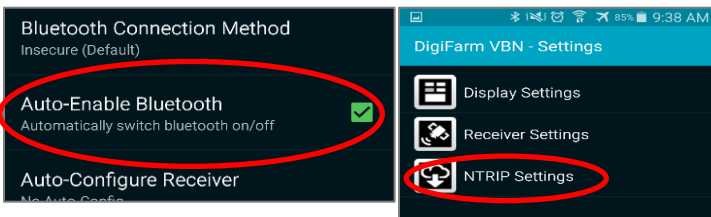


6 Select Network protocol NTRIP v1.0, Caster Port 3101, enter your username & password from DigiFarm; download source table; and get from external receiver

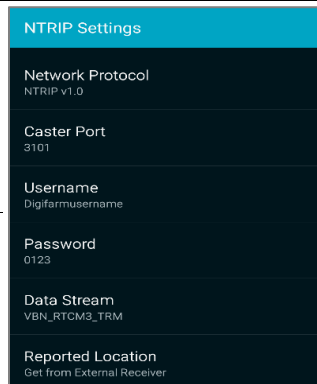


7 Return to the app home screen & tap Connect; the mountpoint list will appear—select the correct one; once selected, the app will start streaming RTK data automatically

iOS Quick Reference Card


1 Pair the Beacon with the IOS device via the settings app

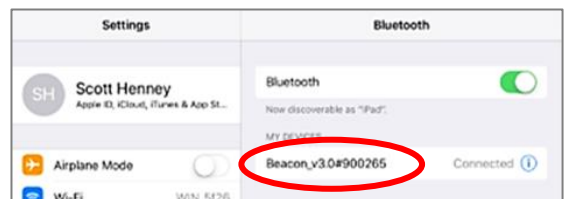

2 Download the **DigiFarm NTRIP Client** app, open it, and allow notifications

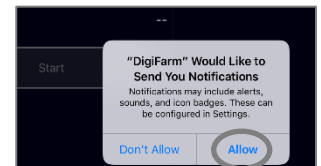

3 Confirm Beacon connection within the app; then select your receiver type; & enter your username & password

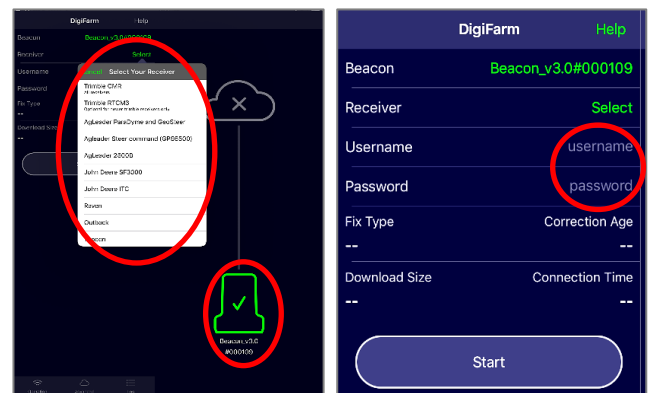

4 Tap the green Start button and allow location access, then you will start streaming RTK data

