


- 1 Begin by connecting Elevate and adapter to the Port A connection on the ParaDyme or GeoSteer cabling




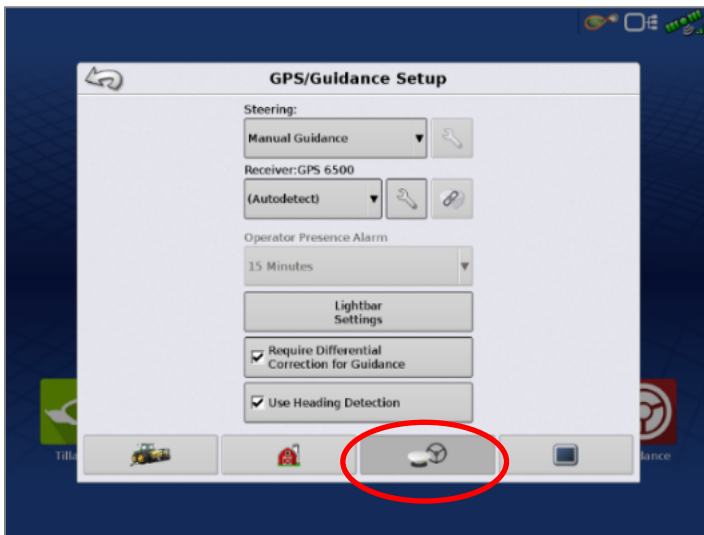
- 2 Connect the Power Tee to the Can B power/Terminator connection on the Display cable

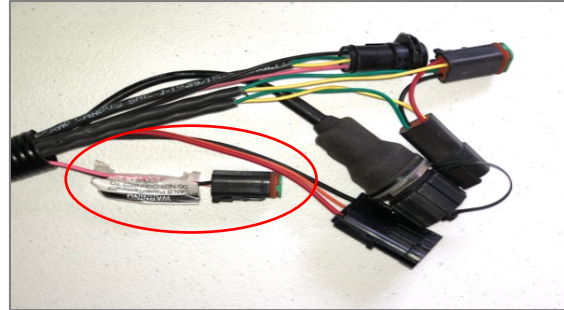


- 3 **Note:** Placement of the elevate modem on the cab roof is vitally important to performance. User must extend the entire length of the cable away from the receiver as shown below.




- 4 Tap the Setup wrench icon, then the icon 



- 5 From the GPS/Guidance setup screen, select the wrench next to ParaDyme/GeoSteer

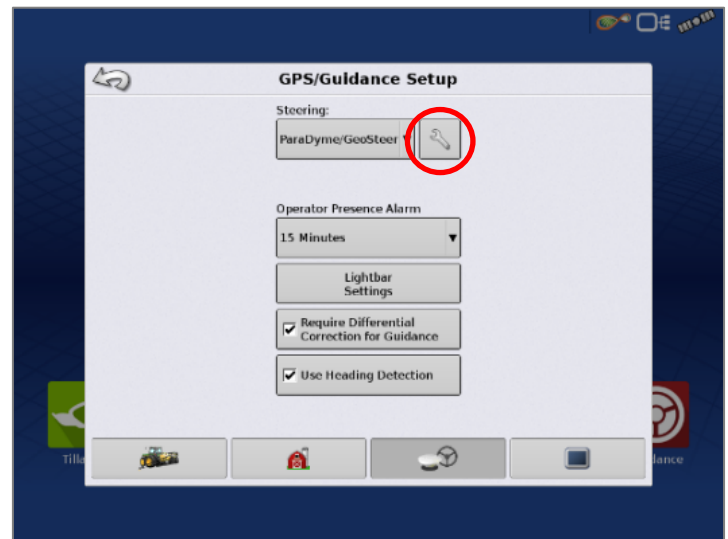


6 Next select the GPS tab, then the RTK icon

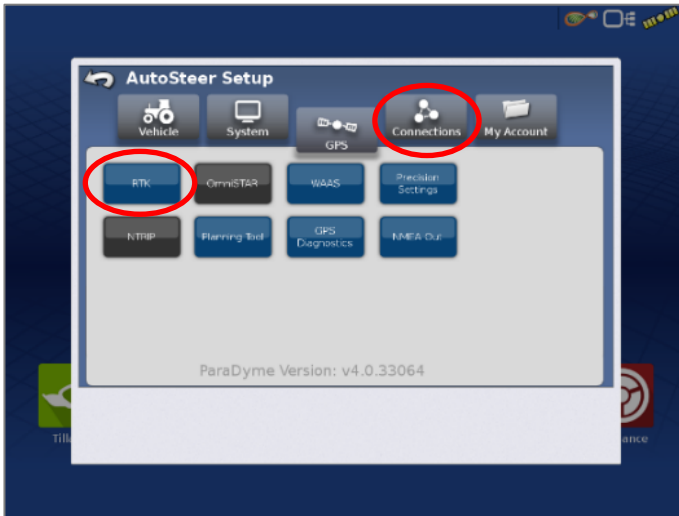

7 Select GLONASS RTK Initialization on the right & enable it

Make sure the Base Station Type is set to Trimble

* if GLONASS does not appear, skip to the next step

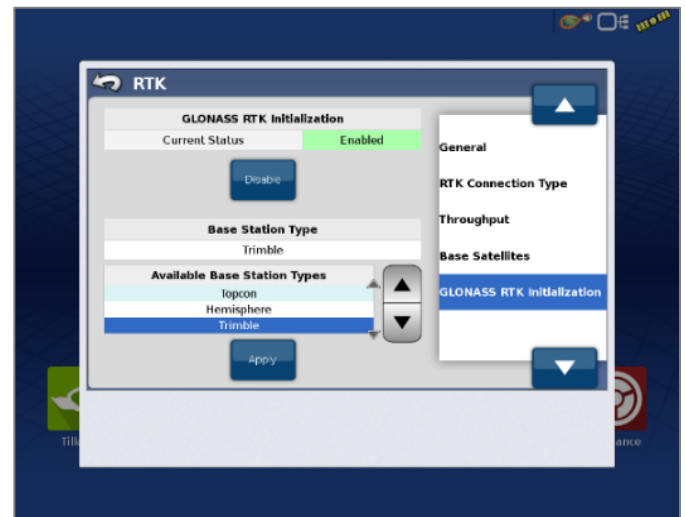

8 Back out of this screen & select the NMEA Out icon

- Port A messages should match the screenshot below (all messages off except GGA current at 1 hz)
- Port A Config > Baud rate should be 38400



9 Back out of this screen, Select Precision settings & set to "RTK ONLY"

Return to the run screen & confirm you have throughput & RTK fix

