
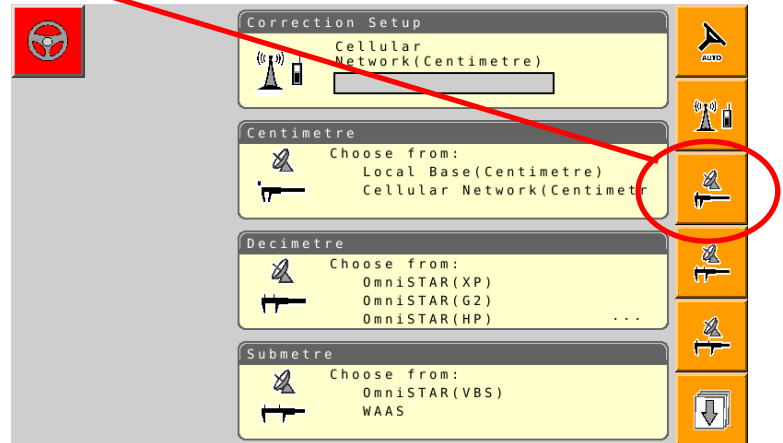



# AGCO C1000 Display setup Quick Reference Card

Begin by connecting the RV50 cable to the AGI 4 Via the adapter cable and black connector on the back of the receiver.


Next, navigate to the Wrench -> System -> Correction level.

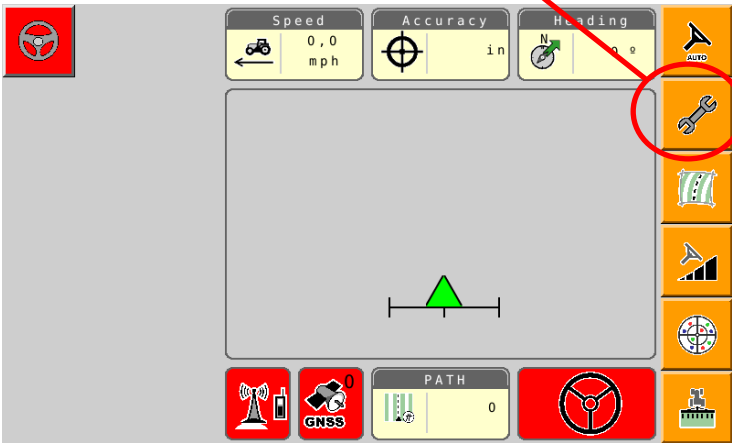


Select Cellular Network

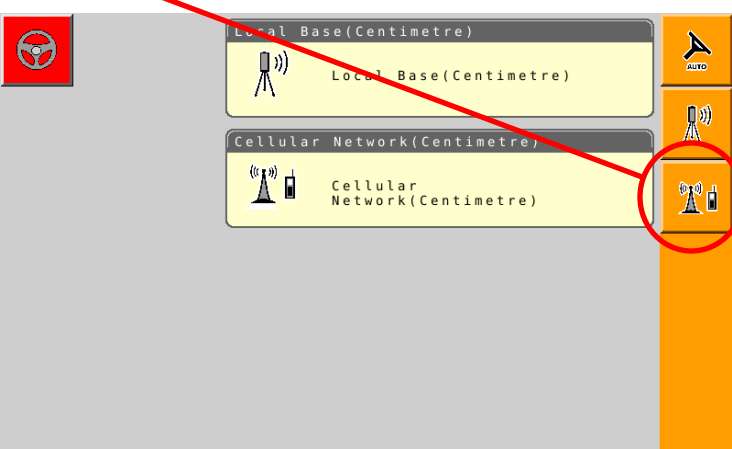

Checkmark "use external radio", then select the checkmark on the right.

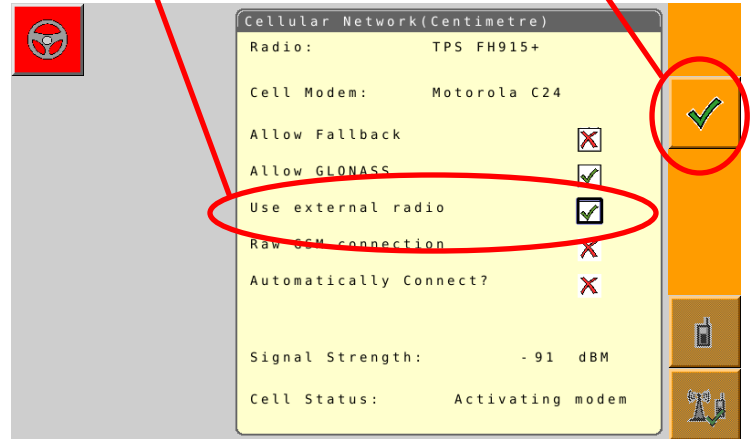

Set the Correction type to RTCM3.X -> Serial Port D -> Baud rate to match the Beacon -> Parity None -> NMEA Rate to 10 seconds.

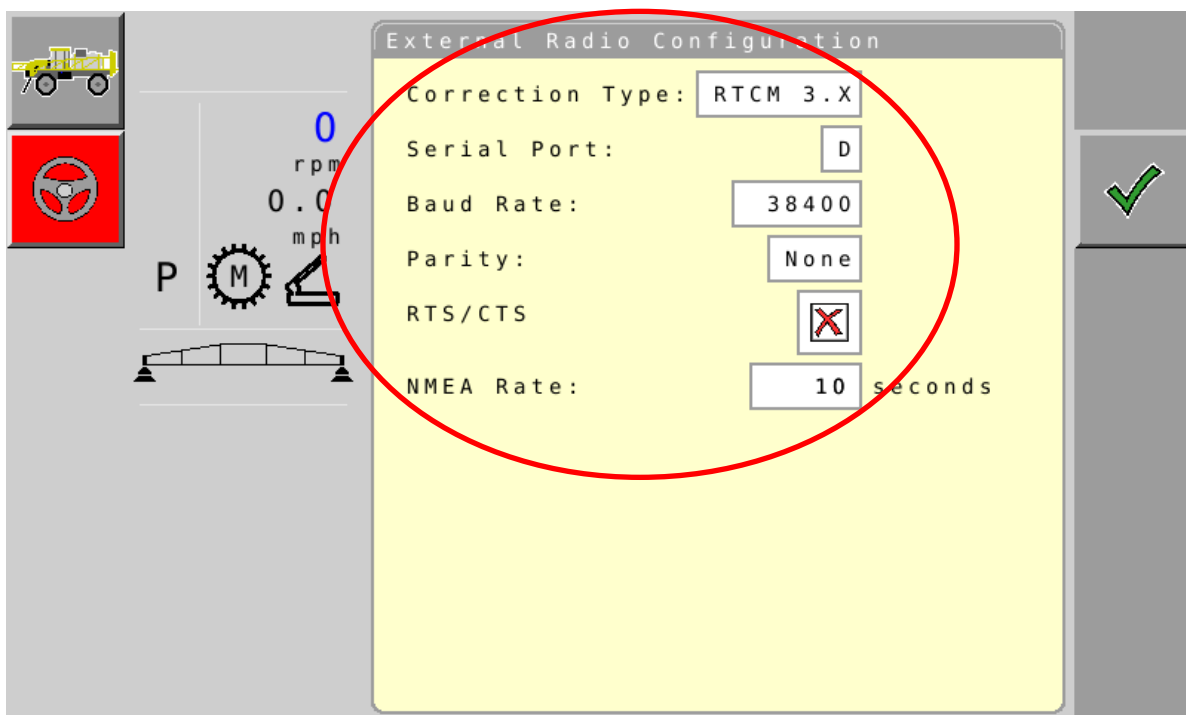

**\*Note- If this unit was ordered with a subscription, it will be preprogrammed and plug and play ready. The following instruction**

Log into the device via WAN static IP (166.XXX.XXX.XXX:8080) or LAN connection (192.168.1.1:8080) on Port 8080 (shown in ip con-

The username and password to log into these devices are as follows

Username: digifarm

Password: digifarm

You will then be directed to the page shown below. On this page you can select a receiver preset based on the receiver type you have, then enter your username and password. Save device info at the bottom then select the reboot icon at the top of the screen

### DigiFarm: NTRIP Client Settings Manager

Logged in as: digifarm | [Log Out](#)

Presets

NovAtel (Raven: RS1, Cruiser II with RTK, 600s, Envizio Pro/Pro II, Viper 4)

Host

caster.godigifarm.com

Port

3101

Mount Point

VBN\_RTCM3\_NOV

Serial Port - Baud Rate

38400

Username

Password

Internal GPS

Manual GPS

Manual GPS - Latitude (Example: "4043.124436,N")

Manual GPS - Longitude (Example: "9640.586358,W")

[Save Changes](#)

### RV50 hardware Installation Guide

