

AGCO NT01 Display Setup

For:

- 2018 CH MT600E wheeled tractor
- 2018 CH MT700
- 2017 FT 500/700/800/900/1000
- 2017 RoGator C series*
- 2017 Gleaner S9*
- 2018 TerraGator C series*

*Note: Pins 4 & 5 need to be interchanged on BN2027 for RoGator, TerraGator & Gleaner

¹ Install the RV50 & AGCO adapter. Use port X5130 behind the radio knockout on RoGator, TerraGator, & Gleaner.




² On the Fendt & Challenger series, it is located on the VD03 to receiver cabling above the drop-down roof panel.




³ On-screen configuration:

Select Auto-Guide > Auto-Guide (again) > System > Signal



⁴ Select:
 RTK network as signal type >
 External Modem as Modem type >
 Choose the correct Baud rate for your corresponding external modem >
 Data parity None >
 Signal Format RTCM3.1.

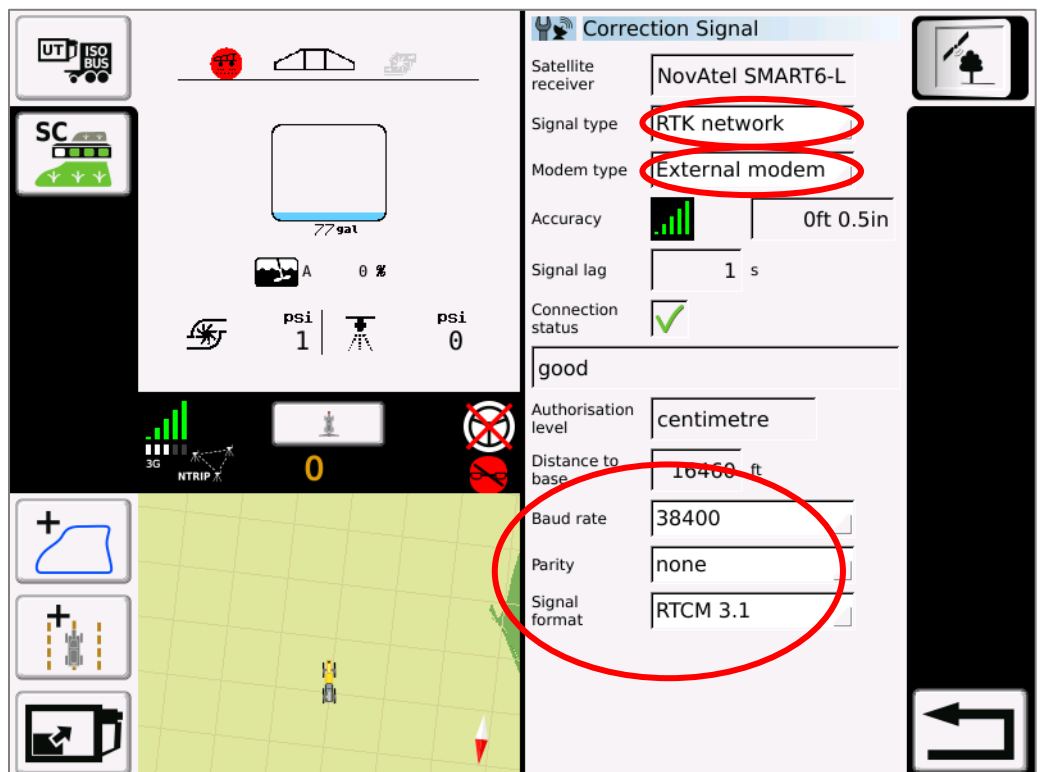



DigiFarm

Quick Reference Card

AGCO NT01 & RV50

*Note- If this unit was ordered with a subscription, it will be preprogrammed and plug and play ready.
The following instructions will not be needed.

Log into the device via WAN static IP (166.XXX.XXX.XXX:8080) or LAN connection (192.168.1.1:8080) on Port 8080.

Username: digifarm

Password: digifarm

You will then be directed to the page shown below. On this page you can select a receiver preset based on the receiver type you have, then enter your username and password. Save device info at the bottom then select the reboot icon at the top of the screen.

DigiFarm: NTRIP Client Settings Manager

Logged in as: digifarm | [Log Out](#)

Presets
NovAtel (Raven: RS1, Cruiser II with RTK, 600s, Envizio Pro/Pro II, Viper 4)

Host
caster.godigifarm.com

Port
3101

Mount Point
VBN_RTCM3_NOV

Serial Port - Baud Rate
38400

Username

Password

Internal GPS

Manual GPS
Manual GPS - Latitude (Example: "4043.124436,N")

Manual GPS - Longitude (Example: "9640.586358,W")

[Save Changes](#)

